


Switches and sockets onto purlins no problem

There is now a simple way to install switches and sockets onto C or Z shaped purlins, providing safe access to power in more locations throughout a building.

The CnZMate mounting block from Aston Distribution is perfect for interior or exterior use in workshops, factories, sheds and garages.

The fast and easy installation saves you time and money on every job. The robust design will handle years of use. Fitted screw caps are also included to enhance the tidy looking finish.

Designed to fit any C or Z section purlin, the low profile maximises the available working space above work benches and enables safe use of power tools, machinery and appliances.

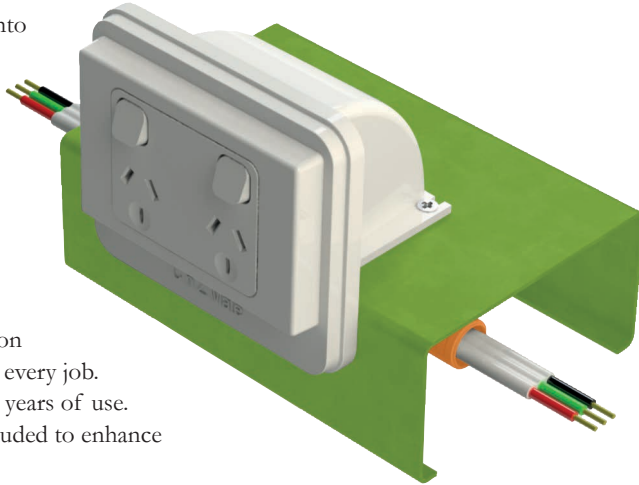

be gang-joined. They have slotted mounting holes giving you better accuracy and shorter installation time.

Ask your electrical wholesaler for the CnZMate P3750 mounting block or, for top-hat purlins, ask for the PurlMate P3650, also from Aston Distribution.

– Kevin Collier, Aston Distribution

Features

- 84 mm mounting centres for standard plate fittings
- 20 or 25 mm conduit entry options
- Fitted screw caps for a tidy finish
- Markings on the side of the mount makes positioning easy
- Slotted design ensures accurate installation every time
- Fully enclosed for electrical safety and vermin control
- Tested to AS/NZS 3133:2008 +A2

CnZMate mounting blocks can be used inside or out or even under eaves to power exterior lights and sensors.

The mounting block can be installed anywhere on walls or ceilings and multiple units can



Aston Distribution
NZ agents for PurlMate and CnZMate

Aston Distribution

P: 027 495 9537

E: info@astondistribution.co.nz

W: www.astondistribution.co.nz